

Owner's Instructions



26 Dual Watt Lamp Fluorescent Work Light

Model No. 83893

CAUTION: Read all instructions and warnings before operating
SAVE THESE INSTRUCTIONS! READ ALL INSTRUCTIONS!

WARNING: To avoid serious injury or death from electrical shock or fire:

- DO NOT** handle this work light or try to plug it in when your hands are wet or damp or when you are standing on a wet or damp surface or in water.
- This work light **MUST ALWAYS BE USED** in accordance with all electrical and safety codes and ordinances, including the most recent National Electric Code (NEC) and with the Occupational Safety and Health Act (OSHA) Volume 1 on General Industry Standards and interpretations.
- ALWAYS** make certain that the power source conforms to the requirements on the work light.
- ALWAYS** disconnect the power before installing lamp(s), servicing or inspecting the work light for any reason.
- This work light **IS ONLY FOR USE ON** 110-125V circuits and is equipped with an approved 3 conductor cord with a 3-prong, grounding type plug.
- WORK LIGHT IS NOT WATERPROOF** and is not intended for use in showers, saunas or in potentially wet locations **ALWAYS** keep this work light away from sinks, tubs, showers, etc. **NEVER ATTEMPT TO PICK UP PLUGGED-IN APPLIANCES WHEN THEY FALL INTO WATER BECAUSE FATAL ELECTROCUTION COULD RESULT.**
- This work light comes equipped with a 3-prong grounded plug. **DO NOT** remove the 3rd prong or otherwise try to modify the plug. If it will not fit the outlet, have the proper outlet installed by a qualified electrician. Improper connection of the grounding conductor can result in a risk of electrical shock.
- NEVER** attempt to plug the work light into a non-grounded outlet or extension cord and **ALWAYS** be sure that the extension cord is in good electrical condition and is a minimum of 16 gauge, 3 conductor.
- This work light is intended for use as a general indoor lighting. **DO NOT** use in potentially dangerous locations, such as in flammable or explosive atmospheres.
- NEVER** operate the light with the clear protective lens removed.
- KEEP OUT OF REACH OF CHILDREN.**

OPERATION

- Plug into any 110-125V standard wall outlet.
- Depress one or both switches to turn on one or both lamps. Light output is 900 lumens for each lamp.
- Outlet is unswitched and energized at all times. Use as needed up to a 1375 Watt, 11 AMP, 125V load.

ELECTRICAL RATING

WARNING: DO NOT OVERLOAD
Check the amperage of the tools or appliances to be plugged into outlet of the work light. The maximum rating of the outlet is 1500 Watts, 12 amps, 125Volts, 60Hz.

Cord Length	Cord Type/ Gauge	Lamp Wattage	Total maximum rating (combines lamp plus outlet)
25 feet	SJT - 16/3	13	1500 Watts, 12 AMPS, 125 Volts, 60Hz

Sears, Roebuck and Co., Hoffman Estates, IL 60179 USA
www.craftsman.com

07/2006




HANGING WORK LIGHT

Multi-position hanging hook "D" can be positioned for vertical, horizontal or storage/non-use. Also rotates 360°.

Rotating magnet mount "E" use for vertical mounting. Clings to most metal surfaces.

WARNING: Do not use magnet for horizontal overhead mounting.

CAUTION: Do not slide on finished painted surfaces magnet may scratch finish.

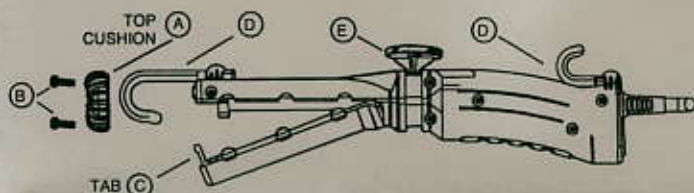

TO REPLACE 26 WATT DUAL FLUORESCENT LAMPS

- Disconnect power cord from electrical outlet.
- Remove top cushion "A" by removing the 2 screws "B".
- Press lock tab "C" while pulling the top of the clear lens forward to remove it, exposing the lamps.
- Pull straight up on the burned out lamp to remove it. A gentle side to side action on the lamp can be used to aid in removal.
- Replace with 13 Watt PL type fluorescent lamp(s) (Sears #98172)
- Return lens to original position in the reverse manner that it was removed and replace top cushion "A".

MAINTENANCE

Remove dirt and grime as soon as it accumulates. Use a soft, damp cloth and a mild soap, if needed. Be sure not to get the electrical plug wet. **NEVER** submerge any part of the Work Light in any solution to clean it. **DO NOT USE** solvents such as gasoline, turpentine, etc. to clean unit.

One Year Full Warranty on Work Light (excluding lamps)

If this product fails due to a defect in material or workmanship within one year from the date of purchase, RETURN IT TO YOUR NEAREST SEARS STORE OR CRAFTSMAN OUTLET IN THE UNITED STATES, and it will be replaced free of charge. The fluorescent lamps that come with this product are expendable parts, not covered by this warranty.

This warranty applies for only 90 days from the date of purchase if this Craftsman Fluorescent Work Light is used for commercial or rental purposes.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179
Assembly or operation questions?
Call 1-800-400-5020