

Owner's Instructions

CRAFTSMAN


IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS!

DANGER - TO REDUCE THE RISK OF ELECTRIC FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

WARNING - When using electrical appliances, base precautions should always be followed, including the following:

1. Read all instructions before using the appliance.
2. **DO NOT** handle this fixture or try to plug it in when your hands are wet or damp or when you are standing on a wet or damp surface or in water.
3. To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
4. **ONLY USE** attachments recommended or sold by the manufacturer.
5. **ONLY USE** the charger supplied by the manufacturer to recharge.
6. **DO NOT** use outdoors. This fixture is intended for use as general indoor lighting.
7. **DO NOT** use in potentially dangerous locations, such as flammable or explosive atmospheres.
8. To reduce the risk of electric shock, do not put in water or other liquid.

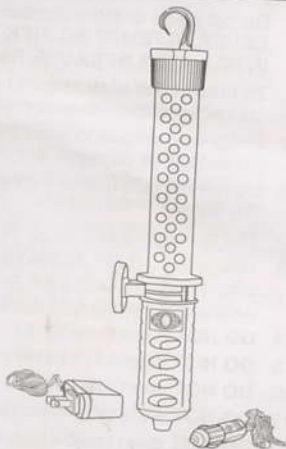

**LED Work Light
Model No. 73904**

Do not place or store appliance where it can fall or be pulled into a tub or sink.
NEVER ATTEMPT TO PICK UP PLUGGED-IN APPLIANCES WHEN THEY FALL INTO WATER BECAUSE FATAL ELECTROCUTION COULD RESULT.

9. To reduce risk of damage to cigarette lighter connector and cord, pull by cigarette lighter connector rather than cord when disconnecting charger.
10. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
11. Do not operate fixture if it has received a sharp blow, been dropped, or otherwise damaged in any way.
12. The direct plug-in charger is intended to be correctly oriented in a vertical or floor mount position.
13. This fixture **MUST ALWAYS BE USED** in accordance with all electrical and safety codes and ordinances, including the most recent National Electric Code (NEC) and with the Occupational Safety and Health Act (OSHA) Volume 1 on General Industry Standards and interpretations.
14. **DO NOT** replace batteries.
15. **DO NOT** dispose of battery in a fire.
16. **DO NOT** short the positive-negative terminals together.
17. **DO NOT** work on this battery pack.
18. **DO NOT** disassemble fixture. The fixture does not have any user serviceable parts.
19. This product is not intended to be repaired by service personal in case of failure or component defect (unit can be thrown away).
20. This product must not be disposed of together with domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.
21. **NEVER** operate the light with the clear protective lens removed.
22. **KEEP AWAY** from excessive heat or flame.

23. **DO NOT** look directly into the light.
24. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation

1. Depress switch in the handle one time to turn on the floodlight LED lights.
2. Depress switch a second time to turn the floodlight off and the spotlight on.
3. Depress the switch a third time to turn both the floodlight and spotlight on.
4. Depress the switch a fourth time to turn both lights off.

Recharging Utility Light

1. Remove cap on the bottom of the worklight handle.
2. When charging with AC adapter, insert the battery charger plug into the jack on the worklight handle and the other end into a standard 110-120V AC outlet.
3. When charging with DC adapter, insert the battery charger plug into the jack on the worklight handle and the other end into a standard 12-volt DC outlet.

NOTE: Batteries will reach full charge in about 2 hours. LED indicator light glows red while the batteries are charging. When the light is fully charged, the LED indicator turns to green.

Hanging Utility Light

1. Hanging hook can rotate 360°.
2. Magnet rotates 360° for attachment to vertical metal surfaces. Clings to most metal surfaces.

WARNING: Do not use magnet for horizontal overhead mounting.

CAUTION: Do not slide on finished painted surfaces as magnet may scratch finish.

Maintenance

Before performing any maintenance, **ALWAYS** unplug worklight. Remove dirt and grime as soon as it accumulates. Use a soft, damp cloth and a mild soap, if needed. Be sure not to get the electrical plug wet. **NEVER** submerge any part of the worklight in any solution to clean it.

DO NOT USE solvents such as gasoline, turpentine, etc. to clean unit. Aerosols and other chemicals may fog the clear polycarbonate lens.

One Year Full Warranty on Worklight

If this product fails due to a defect in material or workmanship within one year from the date of purchase, **RETURN IT TO YOUR NEAREST SEARS STORE OR CRAFTSMAN OUTLET IN THE UNITED STATES**, and it will be replaced free of charge. This warranty applies for only 90 days from the date of purchase if this Craftsman Worklight is used for commercial or rental purposes. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179 USA
Assembly or operation questions? Call 1-800-469-4663
www.craftsman.com 04/2009

Printed in China
825-0318