

CRAFTSMAN®

USER INSTRUCTIONS

⚠️ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution:

- Be sure power is not connected **BEFORE** installing the receiver.

 
To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- Install door control within sight of gate or garage door, out of reach of children at a minimum height of 5 feet (1.5 m), and away from all moving parts of gate or door.
- **NEVER** permit children to operate or play with door control push buttons or remote control transmitters.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to gate or door travel.
- **ALWAYS** keep gate or garage door in sight until completely closed. **NEVER** permit anyone to cross path of moving gate or garage door.

3-Function Remote Control



Universal Receiver

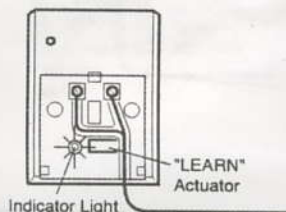

INSTALLATION

- Unplug the motor unit before proceeding.
- **OPEN RECEIVER:** Insert a small screwdriver in slot on receiver front panel as shown. Twist up actuator cover.
- **CONNECT RECEIVER AND MOTOR UNIT:** Remove about 1/4" of insulation from each end of the 2-strand bell wire. Connect one end to the receiver screw terminals (polarity is NOT required). Route wire along the channels and out the bottom as shown.
- Connect the other end of the bell wire to the two motor unit terminals labeled "2" (white) and "1" (red), "common" and "command" or the terminals used for the push button control.
- Use insulated staples to secure bell wire between receiver and motor unit. Length of bell wire depends on where the receiver will be installed. Replace actuator cover.
- Choose a 120Vac polarized outlet for the receiver which is **OUT OF THE REACH OF CHILDREN**. Plug receiver into selected outlet. Return power to the motor unit.

SECURITY+® Universal Remote Control Conversion Kit


Model 139.53751

NOTICE TO U. S. CONSUMERS:

Some states prohibit the service or repair of garage door motor units which cannot be made to comply with the safety standards contained in UL 325 (1988 revision). In order to comply with both the letter and the spirit of these laws, this universal remote control converter kit should not be used with any Sears Craftsman® garage door opener manufactured prior to April 1, 1982.

NOTICE: To comply with FCC and/or Industry Canada (IC) rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

 Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

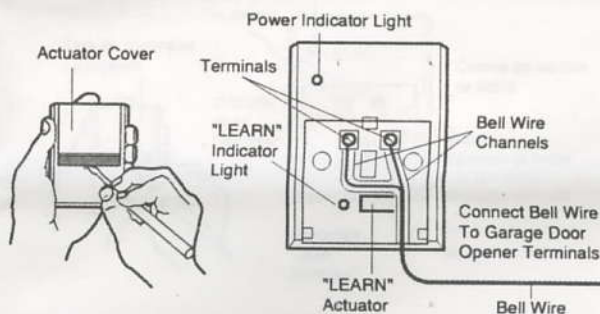

PROGRAMMING THE REMOTE TO THE RECEIVER

The receiver and remote control(s) have been factory preset with a matching code. The door will open when you press the large push button.

With Security+®, the code between the remote control and the receiver changes with each use, accessing over 100 billion new codes.

You can activate your motor unit with up to 8 Security+® remote controls and one Security+® Keyless Entry.

1. Pry open the front panel of receiver case with a screwdriver. Re-connect power to motor unit.
2. Press and release the "learn" actuator on the receiver. The learn indicator light will glow steadily for 30 seconds.
3. Within 30 seconds, press and hold the button on the hand-held remote that you wish to operate your garage door.

The motor unit will now operate when either the receiver actuator or the remote control push button is pressed.

Repeat Steps 2 and 3 for each remote control that will be used to operate the garage door motor unit.

 
TO ERASE ALL REMOTE CONTROL CODES

Press and hold the "learn" actuator on the receiver panel until the indicator light turns off (about 6 seconds). All transmitter codes are now erased. Then follow the steps above to reprogram each remote control.

THE REMOTE CONTROL BATTERIES

⚠ WARNING

- To prevent possible **SERIOUS INJURY** or **DEATH**:
- NEVER allow small children near batteries.
 - If battery is swallowed, immediately notify doctor.

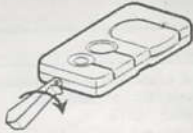

The lithium battery should produce power for up to 5 years. To replace battery, use the visor clip or screwdriver blade to pry open the case as shown. Insert battery matching polarity instructions inside

the remote cover or on the printed circuit board.

Dispose of old battery properly.

Replacement parts:

Universal receiver (complete)	41A6116-1
Remote control housing only (no circuit board)	41A6140-1
Visor clip	29B134
3V 2016 Lithium battery	10A20

When ordering parts, always provide the following information:

- Product type
- Model number
- Part number
- Part description

To order replacement parts call...
1-800-4-MY-HOME® (1-800-469-4663)