







**WIRING DIAGRAM**

Model RECIPROCATING SAW - 315114270 (HOUSING ASSY)

Part Description	Part Number	Diagram Reference Number	Quantity
SCREW M3.5X25MM	6620604		1
SCREW M4X16MM	6620805		2
SCREW M3.5X14MM	6620614		3
HSG ASY	984424-001		4
SCREW M4X18	6616503		5
SCREW M4X12MM	6621211		6
SCREW M4X25MM	6621215		7
WASHER SPRING	6703001		8
GEAR CASE COVER	6899801		9
SLIDING ROD COVER	6900501		10
GEAR ASY	3030810		11
RETAINING RING	6902501		12
BALL BEARING	6899901		13
BALL BEARING	6899902		14
GEAR CASE SUPPORT	6899709		15
MOTOR ASY	2310402		16
RETAINING RING	6770401		17
RUBBER WEDGE	5672301		18
RUBBER CUSHION	5670401		19
CONNECTING ROD	6406002		22
NEEDLE ROLLER SPRING	6829603		23
CONTACT PLATE STOPPER	5621903		25
BLADE RELEASE MECHA.	984425-001		26
RUBBER PAD	5670301		27
CONNECTING BUSHING	6900101		28
PIN	6900901		29
SLIDE BUSHING	6900401		30
SLIDE BUSHING	6900402		31
FIBER SHEET	9031034		32
SLIDING ROD ASY	984426-001		33
SAFETY BUTTON	984427-001		34
SW. ASY	2701652		35
OWNERS MANUAL	983000-193	None	

Model RECIPROCATING SAW - 315114270 (SAW)

Part Description	Part Number	Diagram Reference Number	Quantity
SHOE ASY	3021608		1
CHARGER	1425301		2
SAW BLADE,WOOD CUT	6929101		3
SAW BLADE,METAL CUT	6929201	3A	
HEX KEY	6800201		4
LOGO PLATE	9421334		5
BATTERY PACK	1323517		6
BATTERY PACK	1323903	6A	
CARRY CASE,COMBO(114232)	3073062	None	
CARRY CASE	3073068	None	