



# Illustrated Parts List

## Model Series

# 125K00

TYPE NUMBERS  
0005 through 3711.

### TABLE OF CONTENTS








Alternator .....	4
Air Cleaner .....	4
Blower Housing/Shrouds .....	5
Camshaft .....	2
Carburetor .....	3
Controls .....	4
Crankshaft .....	2
Cylinder .....	2
Electric Starter .....	6
Electrical .....	4
Engine Sump .....	2
Exhaust System .....	4
Flywheel .....	6
Flywheel Brake .....	4
Fuel Supply .....	3
Governor Spring .....	4
Ignition .....	4
Kits/Gaskets .....	2 & 3
Lubrication .....	2
Piston Group .....	2
Rewind Starter .....	6
Valves .....	2



PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.











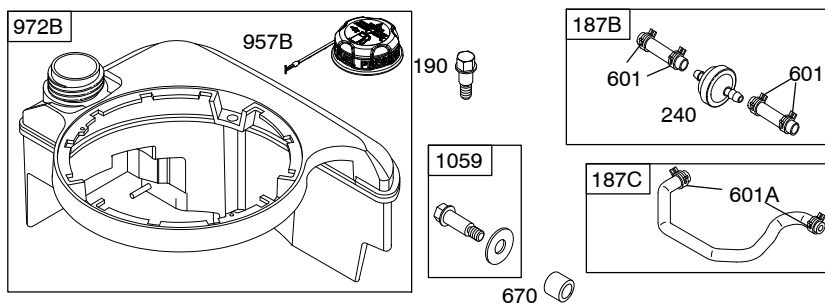
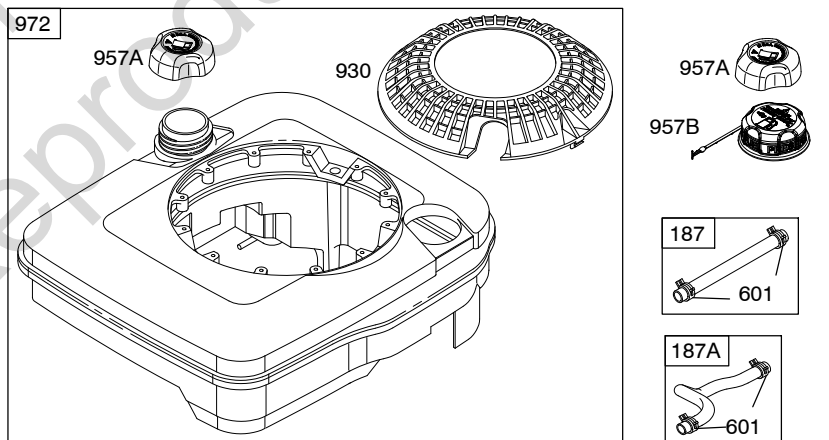
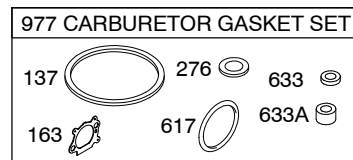
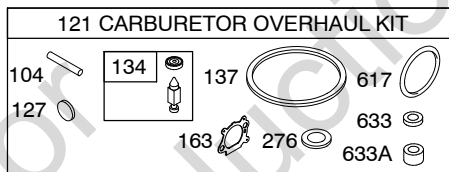
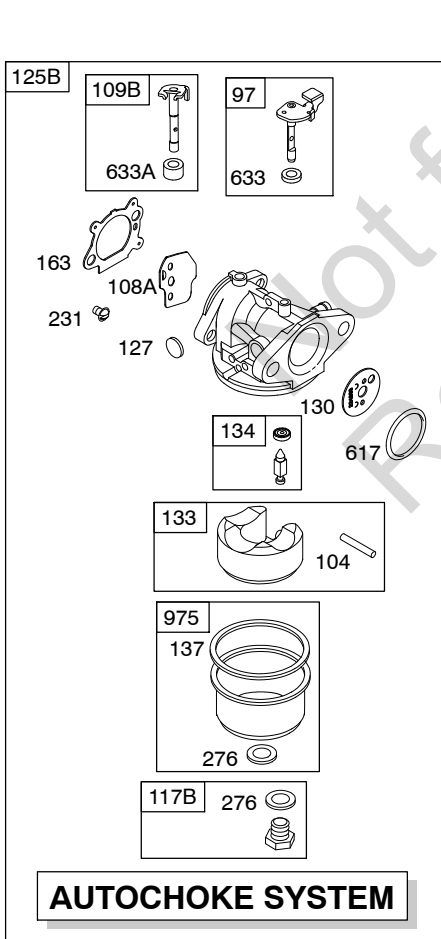
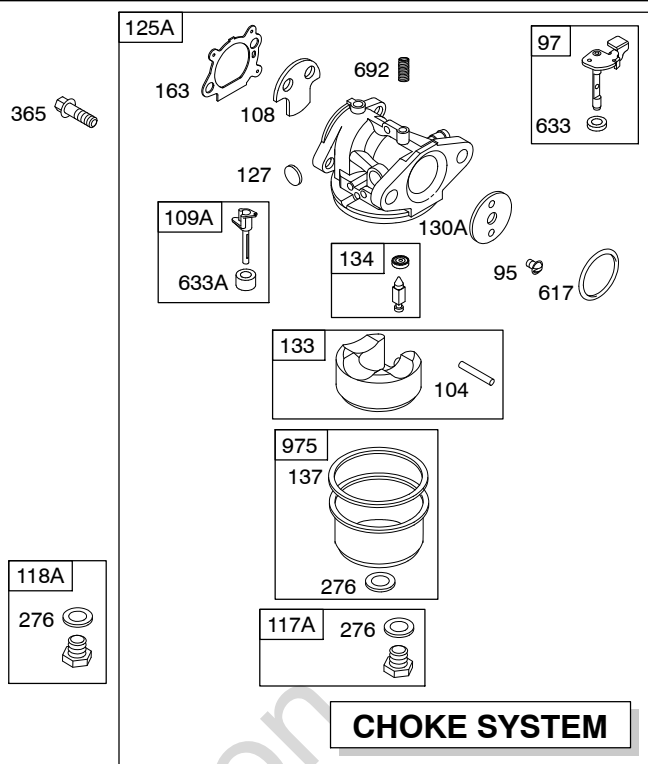
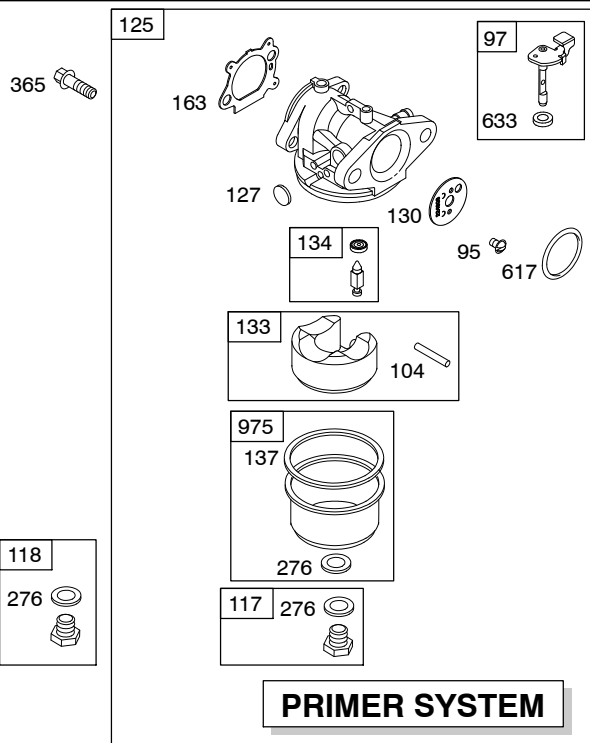


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5482-3 Assemblies include all parts shown in frames. 03/25/2011







# 125K00

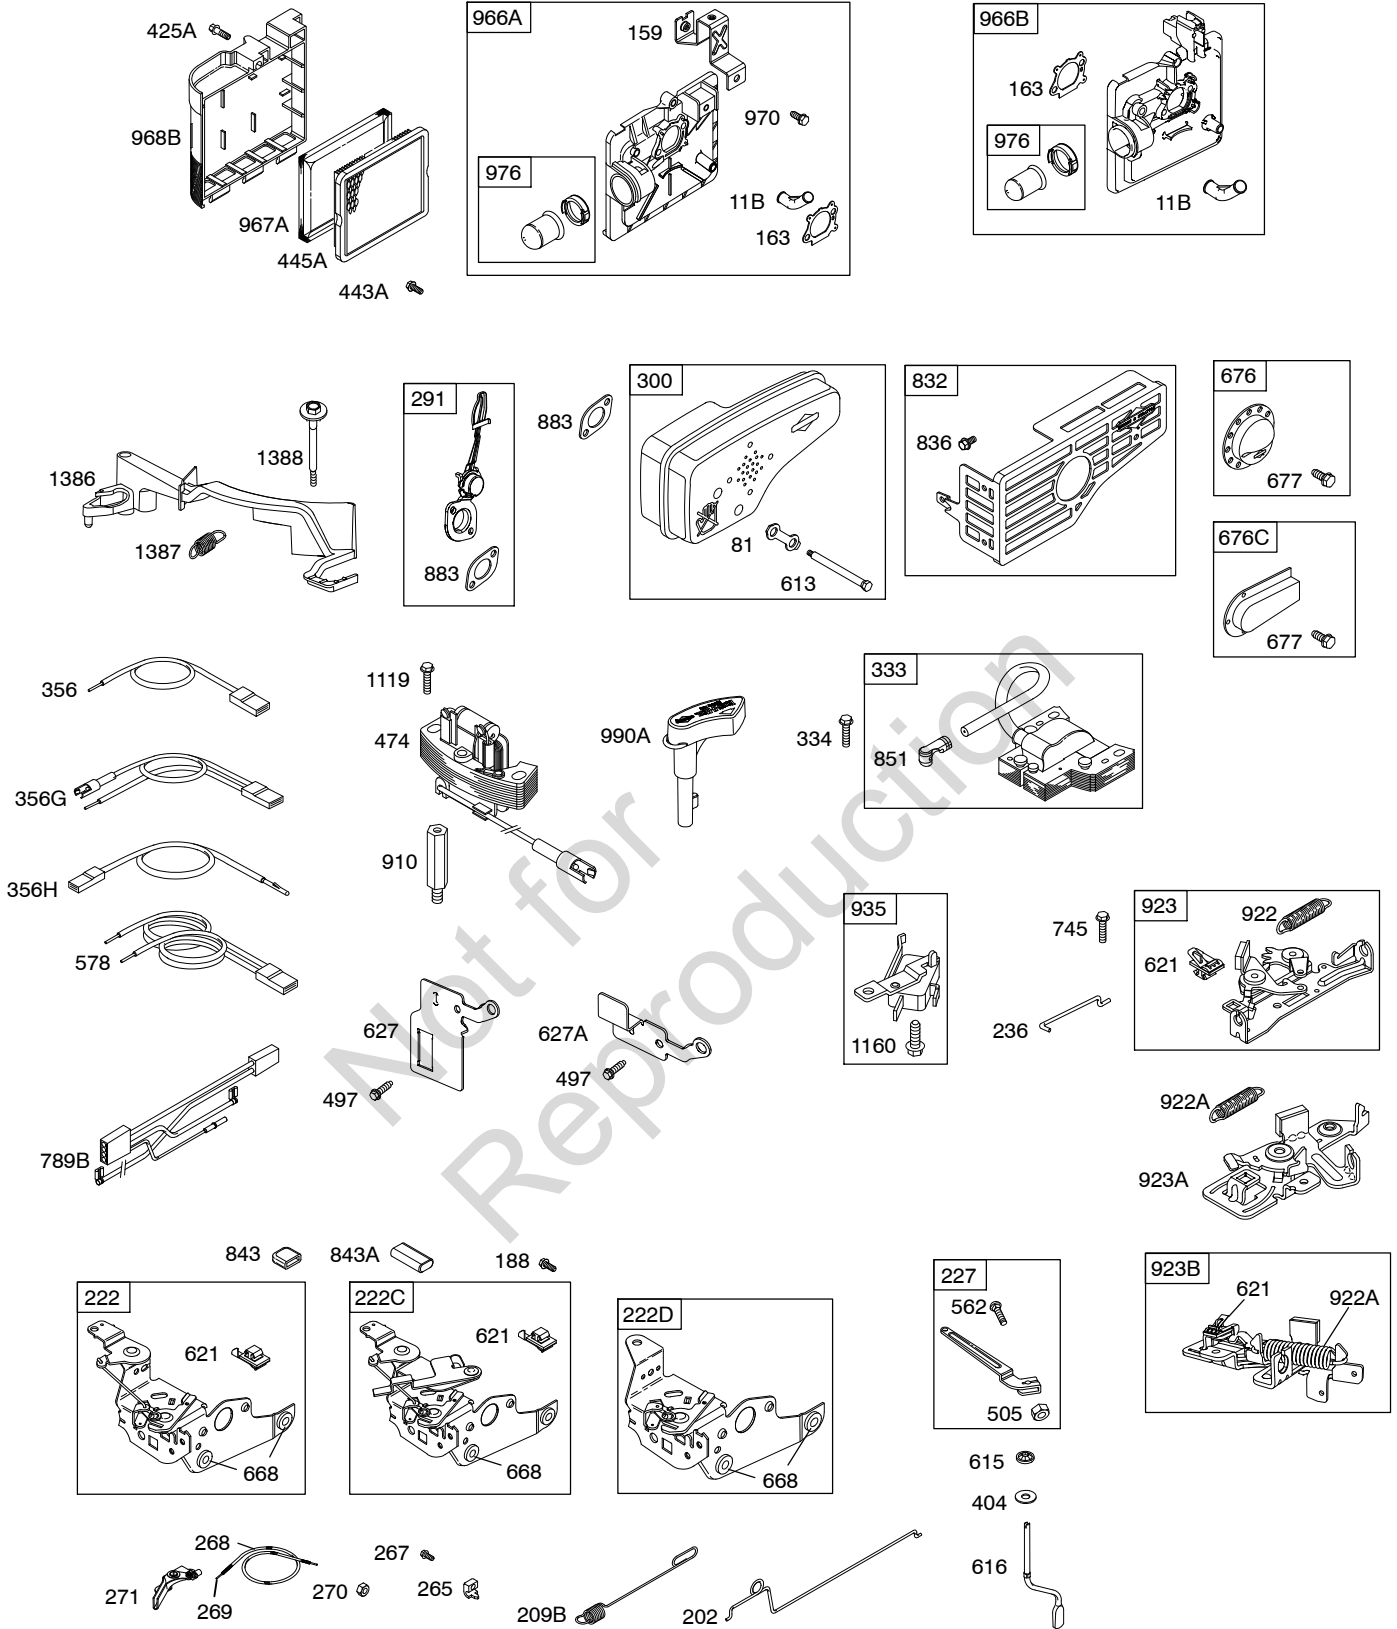

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
**5482-4** Assemblies include all parts shown in frames. **03/25/2011**

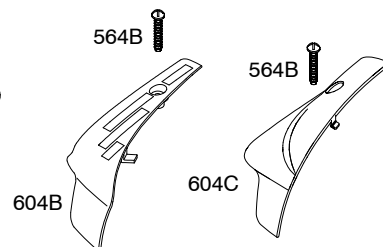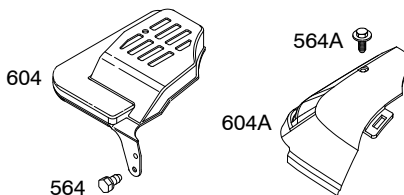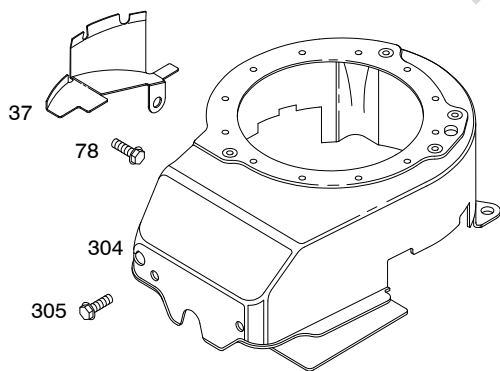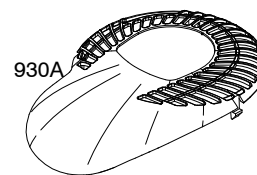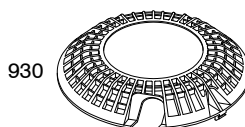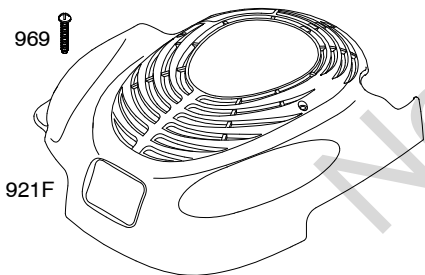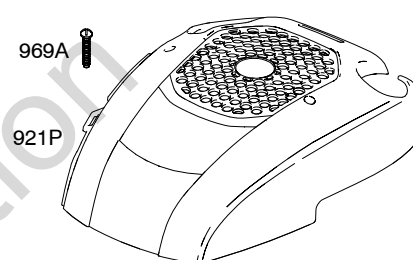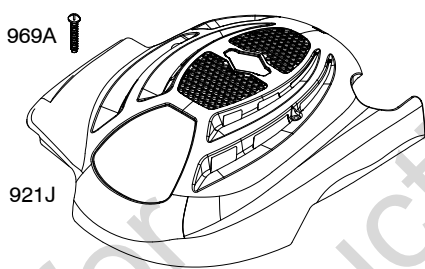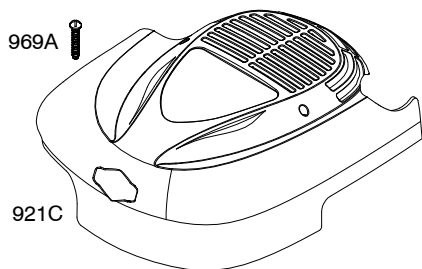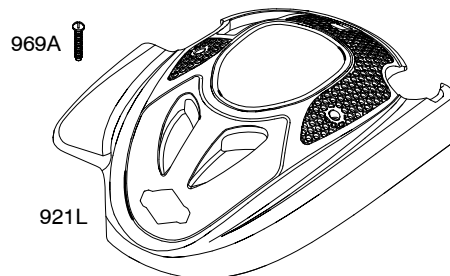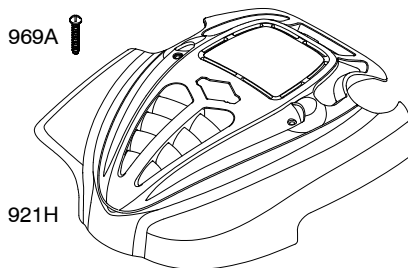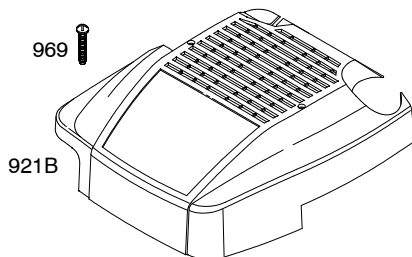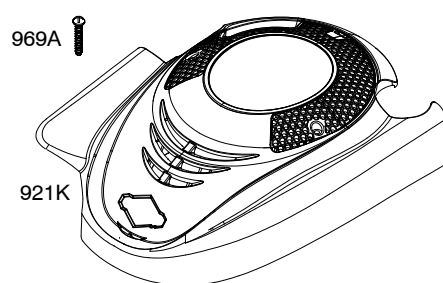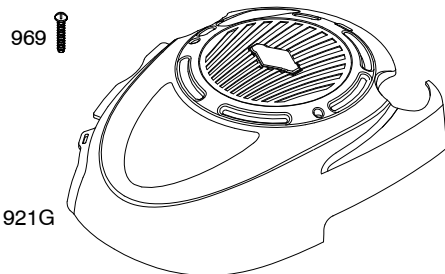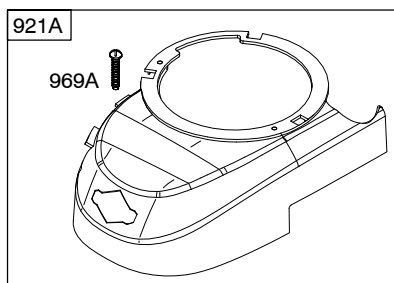

1036 EMISSIONS LABEL

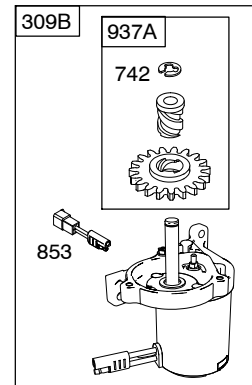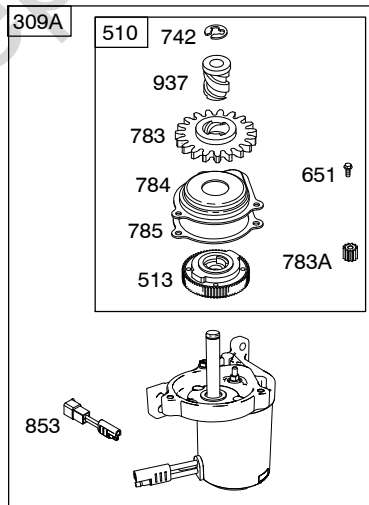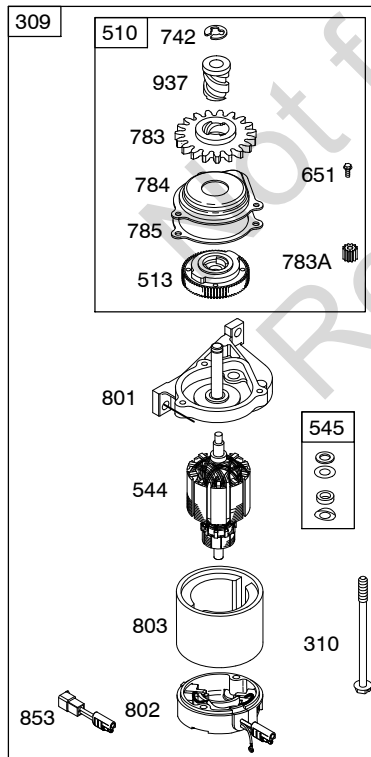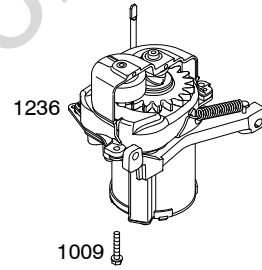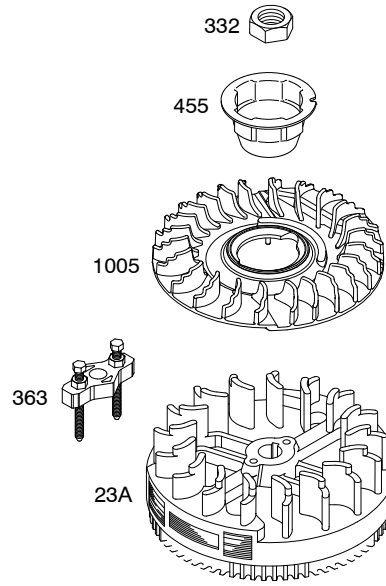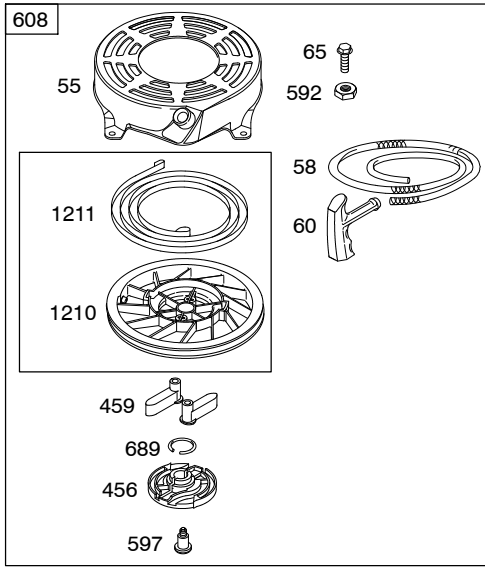

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691451	Crankshaft	23A	691987	Flywheel
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			----- Note -----
3	★299819S	Seal-Oil (Magneto Side)			691450 Crankshaft Used on Type No(s). 0025,0133,0139,0141, 0142,0180,0196,0197, 0198,0253,0263,0303, 0317,0318,0319,0325, 0336,0345,0355,0370, 0426,0427,0446,0448, 0449,0451,0453,0457, 0460,0461,0473,0477, 0482,0483,0487,0497, 0499,0500,0506,0509, 0512,0518,0542,0546, 0548,0561,0562,0578, 0579,0619,0624,0630, 0642,0654,0658,0659, 0661,0662,0683,0690, 0711,1024,1071,3711.			696291 Flywheel Used on Type No(s). 0266, 0286. 691992 Flywheel Used on Type No(s). 0005, 0129, 0130, 0131, 0132, 0137, 0138, 0140, 0187, 0188, 0194, 0195, 0202.
4	493279	Sump-Engine ----- Note ----- 696294 Sump-Engine Used on Type No(s). 0266, 0286.			694849 Crankshaft Used on Type No(s). 0005,0130,0131,0132, 0137,0138.			
5	691160	Head-Cylinder			696009 Crankshaft Used on Type No(s). 0179,0186,0189,0193, 0195.	24	222698S	Key-Flywheel
7	★Ø692249	Gasket-Cylinder Head			691455 Crankshaft Used on Type No(s). 0129,0323.	25	797302	Piston Assembly (Standard) (Used After Code Date 09041600).
8	695250	Breather Assembly			791061 Crankshaft Used on Type No(s). 0187,0188,0194,0195, 0202.			----- Note ----- 795429 Piston Assembly (Standard) (Used After Code Date 07090300 and Before Code Date 09041700).
9	★Ø696125	Gasket-Breather						791097 Piston Assembly (Standard) (Used Before Code Date 07090400).
10	691125	Screw (Breather Assembly)						797303 Piston Assembly (.020" Oversize) (Used After Code Date 09041600).
11	691781	Tube-Breather						795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700).
11B	691923	Tube-Breather						791326 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).
12	★692232	Gasket-Crankcase						
13	690912	Screw (Cylinder Head)	20	★399781S	Seal-Oil (PTO Side)			
15	691680	Plug-Oil Drain (Square Socket)	22	691092	Screw (Crankcase Cover/ Sump)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 125K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	797304	Ring Set (Standard) (Used After Code Date 09041600). ----- <b>Note</b> ----- 795431 Ring Set (Standard) (Used After Code Date 07090300 and Before Code Date 09041700). 791098 Ring Set (Standard) (Used After Code Date 04031400 and Before Code Date 07090400). 499425 Ring Set (Standard) (Used Before Code Date 04031500). 797305 Ring Set (.020" Oversize) (Used After Code Date 09041600). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700). 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07090400). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200).	28	298909	Pin-Piston (Used After Code Date 09041600). ----- <b>Note</b> ----- 499423 Pin-Piston (Used Before Code Date 09041700).	55	691421	Housing-Rewind Starter
			29	797306	Rod-Connecting (Used After Code Date 09041600). ----- <b>Note</b> ----- 499424 Rod-Connecting (Used Before Code Date 09041700).	58	697316	Rope-Starter (Cut To Required Length) ----- <b>Note</b> ----- 791362 Rope-Starter Used on Type No(s). 0197, 0198.
			32	691664	Screw (Connecting Rod)	60	281434S	Grip-Starter Rope
			32A	695759	Screw (Connecting Rod)	60C	799716	Grip-Starter Rope
			33	262651S	Valve-Exhaust	65	690837	Screw (Rewind Starter)
			34	262652S	Valve-Intake	78	691108	Screw (Flywheel Guard)
			35	691270	Spring-Valve (Intake)	81	691740	Lock-Muffler Screw
			36	691270	Spring-Valve (Exhaust)	95	691636	Screw (Throttle Valve)
			37	694086	Guard-Flywheel	97	493267	Shaft-Throttle (Metal) ----- <b>Note</b> ----- 696565 Shaft-Throttle (Plastic)
			40	692194	Retainer-Valve	104	691242	Pin-Float Hinge
			43	691997	Slinger-Governor/Oil	108	691182	Valve-Choke
			45	690548	Tappet-Valve	108A	795935	Valve-Choke (Used After Code Date 08031200). ----- <b>Note</b> ----- 790844 Valve-Choke (Used Before Code Date 08031300).
			46	691449	Camshaft	109A	498593	Shaft-Choke
			50	497465	Manifold-Intake Used on Type No(s). 1024, 1071.	109B	795936	Shaft-Choke (Used After Code Date 08031200). ----- <b>Note</b> ----- 790843 Shaft-Choke (Used Before Code Date 08031300).
			50A	794305	Manifold-Intake Used on Type No(s). 1024, 1071.			
			51	★272199S	Gasket-Intake			
			51A	★794306	Gasket-Intake			
27	691588	Lock-Piston Pin (Used After Code Date 09041600). ----- <b>Note</b> ----- 691866 Lock-Piston Pin (Used Before Code Date 09041700).	54	691650	Screw (Intake Manifold)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5482-8

Assemblies include all parts shown in frames.

03/25/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	498978	Jet-Main (Standard) ----- <b>Note</b> ----- <b>494870</b> Jet-Main (Standard) Used on Type No(s). 0134, 0561, 0658, 0659, 0683.	118	498975	Jet-Main (High Altitude) ----- <b>Note</b> ----- <b>497315</b> Jet-Main (High Altitude) Used on Type No(s). 0134, 0561, 0658, 0659, 0683.	125	498170	Carburetor (Primer System) ----- <b>Note</b> ----- <b>790821</b> Carburetor (Primer System) Used on Type No(s). 0134, 0561, 0658, 0659, 0683.
117A	498978	Jet-Main (Standard) ----- <b>Note</b> ----- <b>498981</b> Jet-Main (Standard) Used on Type No(s). 0005.	118A	497466	Jet-Main (High Altitude) ----- <b>Note</b> ----- <b>494870</b> Jet-Main (High Altitude) Used on Type No(s). 0005.	125A	499059	Carburetor (Choke System) ----- <b>Note</b> ----- <b>792253</b> Carburetor (Choke System) Used on Type No(s). 0005.
117B	697355	Jet-Main (Standard) ----- <b>Note</b> ----- <b>498977</b> Jet-Main (Standard) (Used After Code Date 08061900). Used on Type No(s). 1024, 1071. <b>691428</b> Jet-Main (Standard) (Used Before Code Date 08062000). Used on Type No(s). 1024, 1071.	118B	692677	Jet-Main (High Altitude) ----- <b>Note</b> ----- <b>694250</b> Jet-Main (High Altitude) (Used After Code Date 08061900). Used on Type No(s). 1024, 1071. <b>695042</b> Jet-Main (High Altitude) (Used Before Code Date 08062000). Used on Type No(s). 1024, 1071.	125B	790845	Carburetor (Autochoke System) ----- <b>Note</b> ----- <b>794304</b> Carburetor (Autochoke System) Used on Type No(s). 1024, 1071.
			121	498260	Kit-Carburetor Overhaul	127	●694468	Plug-Welch
						130	●696564	Valve-Throttle
						130A	●691203	Valve-Throttle
						133	●398187	Float-Carburetor
						134	●398188	Kit-Needle/Seat
						137	●◆796610	Gasket-Float Bowl (1/8" Thick) ----- <b>Note</b> ----- <b>693981</b> Gasket-Float Bowl (1/16" Thick)
						146	●690979	Key-Timing
						159	●691753	Bracket-Air Cleaner Primer
						163★●◆272653	●	Gasket-Air Cleaner
						187	●791766	Line-Fuel (Cut to Required Length)
						187A	●791873	Line-Fuel (Molded)
						187B	●791891	Line-Fuel (Includes Filter)
						187C	●791875	Line-Fuel (Molded)
						188	●693399	Screw (Control Bracket)
						190	●690940	Screw (Fuel Tank)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊙ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 125K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
202	691829	Link-Mechanical Governor	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	291	790830	Thermostat
209B	699056	Spring-Governor	222C	692150	Bracket-Control (Variable Speed) (5 Postion Manual Choke)	300	692038	Muffler (Super Lo Tone)
		----- Note -----						----- Note -----
		691292 Spring-Governor Used on Type No(s). 0142, 0178, 0179, 0186, 0187, 0188, 0189, 0202, 0325, 0336, 0355, 0426, 0427, 0460, 0461, 0483, 0512, 0548.	222D	692467	Bracket-Control (Fixed Speed)			790828 Muffler Used on Type No(s). 0133, 0139, 0180, 0196, 0197, 0198, 0389, 0448, 0449, 0450, 0487, 0515, 0542, 0562, 0630, 0642, 0690.
		691851 Spring-Governor Used on Type No(s). 0130, 0139, 0141, 0180, 0196, 0197, 0198.			----- Note -----			
		691290 Spring-Governor Used on Type No(s). 0005, 0131, 0132, 0137.			791128 Bracket-Control (Fixed Speed) Used on Type No(s). 0133, 0139, 0180, 0188, 0196, 0197, 0198, 0202, 0266, 0389, 0431, 0432, 0448, 0449, 0450, 0487, 0542, 0546, 0548, 0561, 0578, 0579, 0619, 0622, 0624, 0630, 0642, 0654, 0658, 0659, 0661, 0683, 0690, 0711, 3711.	304	695892	Housing-Blower
		691291 Spring-Governor Used on Type No(s). 0129, 0138, 0140.	227	690783	Lever-Governor Control			----- Note -----
		691852 Spring-Governor Used on Type No(s). 0193, 0194, 0195.	231	691636	Screw (Choke Valve)			493293 Housing-Blower Used on Type No(s). 0060, 0178, 0179, 0186, 0189, 0193, 0263, 0274, 0318, 0319, 0345, 0431, 0432, 0453, 0499, 0546, 0659.
			236	691826	Link-Lockout			696298 Housing-Blower Used on Type No(s). 0266, 0286.
			240	298090S	Filter-Fuel			493294 Housing-Blower Used on Type No(s). 0005, 0129, 0130, 0131, 0132, 0137, 0138, 0140, 0187, 0188, 0194, 0195, 0202.
			265	690798	Clamp-Casing			790826 Housing-Blower Used on Type No(s). 0133, 0139, 0196, 0197, 0389, 0449, 0450, 0487, 0515, 0542, 0630, 0690.
			267	691044	Screw (Casing Clamp)			790983 Housing-Blower Used on Type No(s). 0180, 0198, 0448, 0560, 0562, 0642, 1071.
			268	691025	Casing-Control Wire (Cut to Required Length)			
			269	691026	Wire-Control (Cut to Required Length)			
			270	691027	Nut (Control Wire Casing)			
			271	691028	Lever-Control			
			276 ◆	271716	Washer-Sealing (Main Jet)			
			287	690940	Screw (Dipstick Tube)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	445A	491588S	Filter-Air Cleaner Cartridge	608	497680	Starter-Rewind ----- <b>Note</b> -----
306	690450	Shield-Cylinder	455	791960	Cup-Flywheel			<b>791363</b> Starter- Rewind
306A	790836	Shield-Cylinder	456	692299	Plate-Pawl Friction			Used on Type No(s). 0197, 0198.
307	690345	Screw (Cylinder Shield)	459	281505S	Plate-Ratchet			
309	695550	Motor-Starter (Used Before Code Date 07052900).	474	691991	Alternator	613	691340	Screw (Muffler) ----- <b>Note</b> -----
309A	795092	Motor-Starter (Used After Code Date 07052800).	497	690664	Screw (Stop Switch Bracket)			<b>790833</b> Screw (Muffler)
310	692327	Bolt (Starter Motor)	505	691251	Nut (Governor Control Lever)			Used on Type No(s). 0133, 0139, 0180, 0196, 0197, 0198, 0389, 0448, 0449, 0450, 0487, 0515, 0542, 0562, 0630, 0642, 0690.
332	690662	Nut (Flywheel)	510	795093	Drive-Starter	615	690340	Retainer-Governor Shaft
333	802574	Armature-Magneto ----- <b>Note</b> ----- <b>790817</b> Armature- Magneto Used on Type No(s). 0134, 0389, 0515, 0561, 0562, 0658, 0659, 0683, 0690.	513	692358	Clutch-Drive	616	698801	Crank-Governor
334	691061	Screw (Magneto Armature)	523	499621	Dipstick	617★◆	270344	Seal-O Ring (Intake Manifold)
337	802592S	Plug-Spark (Resistor) ----- <b>Note</b> ----- <b>697451</b> Plug-Spark (EMS)	524	★692296	Seal-Dipstick Tube	621	692310	Switch-Stop
356	692390	Wire-Stop	525	495265	Tube-Dipstick	627	692872	Bracket-Stop Switch ----- <b>Note</b> -----
356G	790704	Wire-Stop	544	690786	Armature-Starter			<b>792565</b> Bracket-Stop Switch Used on Type No(s). 0130.
356H	690791	Wire-Stop	545	492919	Washer Set	627A	793211	Bracket-Stop Switch
358	794307	Gasket Set-Engine	562	92613	Bolt (Governor Control Lever)	633	◆◆691321	Seal-Choke/Throttle Shaft
363	19069	Flywheel Puller	564	690664	Screw (Control Cover)	633A	◆◆693867	Seal-Choke/Throttle Shaft
365	691688	Screw (Carburetor)	564A	691142	Screw (Control Cover)	635	66538S	Boot-Spark Plug
383	89838S	Wrench-Spark Plug	564B	698589	Screw (Control Cover)	651	691660	Screw (Starter Gear Cover)
404	690272	Washer (Governor Crank)	578	398153	Wire-Assembly	668	★493823	Spacer
425A	690670	Screw (Air Cleaner Cover)	584	697734	Cover-Breather Passage	670	692294	Spacer-Fuel Tank
443A	692523	Screw (Air Cleaner Primer Base)	585	★691879	Gasket-Breather Passage	676	396548	Deflector-Muffler
			592	690800	Nut (Rewind Starter)	676C	493871	Deflector-Muffler
			597	691696	Screw (Pawl Friction Plate)			
			601	791850	Clamp-Hose			
			601A	691038	Clamp-Hose			
			604	691757	Cover-Control			
			604A	691344	Cover-Control			
			604B	790703	Cover-Control			
			604C	792418	Cover-Control			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 125K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
677	690661	Screw (Muffler Deflector)	801	690782	Cap-Drive	923	691994	Brake
684	690345	Screw (Breather Passage Cover)	802	695267	Cap-End	923A	695891	Brake
689	691855	Spring-Friction	803	695266	Housing-Starter	----- Note -----		
692	690572	Spring-Detent	832	499034	Guard-Muffler	<b>695891</b> Brake		
697	691127	Screw (Drive Cap)	836	690664	Screw (Muffler Guard)	(Used Before Code Date 08050100).		
718	690959	Pin-Locating	842	★691031	Seal-O Ring (Dipstick Tube)	Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711.		
741	797521	Gear-Timing (Metal) (Used After Code Date 08021700).	843	691884	Sleeve-Lever (Speed Control)	----- Note -----		
		----- Note -----	843A	691895	Sleeve-Lever (Choke)	<b>63709</b> Bushing-Valve Guide (Intake)		
		<b>795755</b> Gear-Timing (Plastic) (Used After Code Date 08021700).	847	692047	Dipstick/Tube Assembly	<b>923B</b> <b>796136</b> Brake		
		<b>794388</b> Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000 and Before Code Date 08021800).	851	493880S	Terminal-Spark Plug	(Used After Code Date 08043000).		
		<b>790345</b> Gear-Timing (Use Without Woodruff Key) (Used Before Code Date 07100100).	853	695268	Adapter-Wire	Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711.		
		<b>691830</b> Gear-Timing (Uses Woodruff Key)	868	697338	Seal-Valve	----- Note -----		
742	93941	Retainer-E Ring	869	691155	Seat-Valve (Intake)	<b>63709</b> Bushing-Valve Guide (Intake)		
745	691648	Screw (Brake)	870	690380	Seat-Valve (Exhaust)	(Used After Code Date 08043000).		
783	691918	Gear-Pinion	871	262001	Bushing-Valve Guide (Exhaust)	Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711.		
783A	691269	Gear-Pinion				----- Note -----		
784	795095	Cover-Starter Gear	883	★∅691881	Gasket-Exhaust	(Used After Code Date 08043000).		
785	692352	Gasket-Starter Cover Used on Type No(s). 0180, 0198.	910	691094	Stud (Alternator)	Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711.		
789B	696547	Harness-Wiring ----- Note ----- <b>792685</b> Harness-Wiring	921A	695886	Cover-Blower Housing	(Used After Code Date 08043000).		
			921B	692931	Cover-Blower Housing	Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711.		
			921C	695889	Cover-Blower Housing	----- Note -----		
			921F	697343	Cover-Blower Housing	(Used After Code Date 08043000).		
			921G	790701	Cover-Blower Housing	Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711.		
			921H	790037	Cover-Blower Housing	----- Note -----		
			921J	790036	Cover-Blower Housing	(Used After Code Date 08043000).		
			921K	699984	Cover-Blower Housing	Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711.		
			921L	791026	Cover-Blower Housing	----- Note -----		
			921P	792687	Cover-Blower Housing	(Used After Code Date 08043000).		
			922	691831	Spring-Brake	Used on Type No(s). 0015, 0025, 0134, 0139, 0141, 0142, 0196, 0197, 0243, 0253, 0273, 0281, 0303, 0320, 0321, 0323, 0370, 0389, 0426, 0427, 0446, 0449, 0450, 0451, 0452, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0525, 0542, 0548, 0561, 0578, 0579, 0619, 0624, 0630, 0654, 0658, 0661, 0662, 0683, 0690, 0711, 3711.		
			922A	692135	Spring-Brake	----- Note -----		

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
930	691919	Guard-Rewind	975	493640	Bowl-Float	1095	498528	Gasket Set-Valve
930A	691345	Guard-Rewind	976	694395	Primer-Carburetor	1119	692979	Screw (Alternator)
935	499421	Switch-Interlock (Used Before Code Date 08050100).	977	498261	Gasket Set-Carburetor	1160	690345	Screw (Interlock Switch)
937	691325	Spline-Starter	990A	695951	Key Set	1210	498144	Pulley/Spring Assembly (Pulley)
937A	799420	Spline-Starter	1005	691346	Fan-Flywheel	1211	498144	Pulley/Spring Assembly (Spring)
957A	692046	Cap-Fuel Tank (Plastic)	1009	696255	Screw (Starter Motor)	1236	695959	Starter-Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
957B	699985	Cap-Fuel Tank (Plastic)	1019	694881	Kit-Label ----- Note ----- 790231 Kit-Label (Touch N Mow)	1319	794467	Label-Warning
966A	496116	Base-Air Cleaner Primer	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)	1330	270962	Manual-Repair
966B	792040	Base-Air Cleaner Primer	1058	277039	Operator's Manual ----- Note ----- 277101 Operator's Manual (Touch N Mow)	1386	790848	Vane-Air (Autochoke System)
967A	493537S	Filter-Pre Cleaner	1059	692311	Kit-Screw/Washer ----- Note ----- 696293 Kit-Screw/ Washer (Touch N Mow)	1387	790849	Spring-Air Vane
968B	692298	Cover-Air Cleaner				1388	790850	Screw (Air Vane)
969	690700	Screw (Blower Housing Cover)						
969A	691138	Screw (Blower Housing Cover)						
970	691669	Screw (Air Cleaner Primer Bracket)						
972	699392	Tank-Fuel (Plastic)						
972B	699374	Tank-Fuel (Plastic) ----- Note ----- 699387 Tank-Fuel (Plastic) Used on Type No(s). 0266, 0286.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

Not for  
Reproduction

Not for  
Reproduction

Not for  
Reproduction

