


ITEM #0049949

# 35 IN. SLATE FIRE PIT

MODEL #650871S



Garden Treasures® is a registered trademark of LF, LLC. All Rights Reserved.

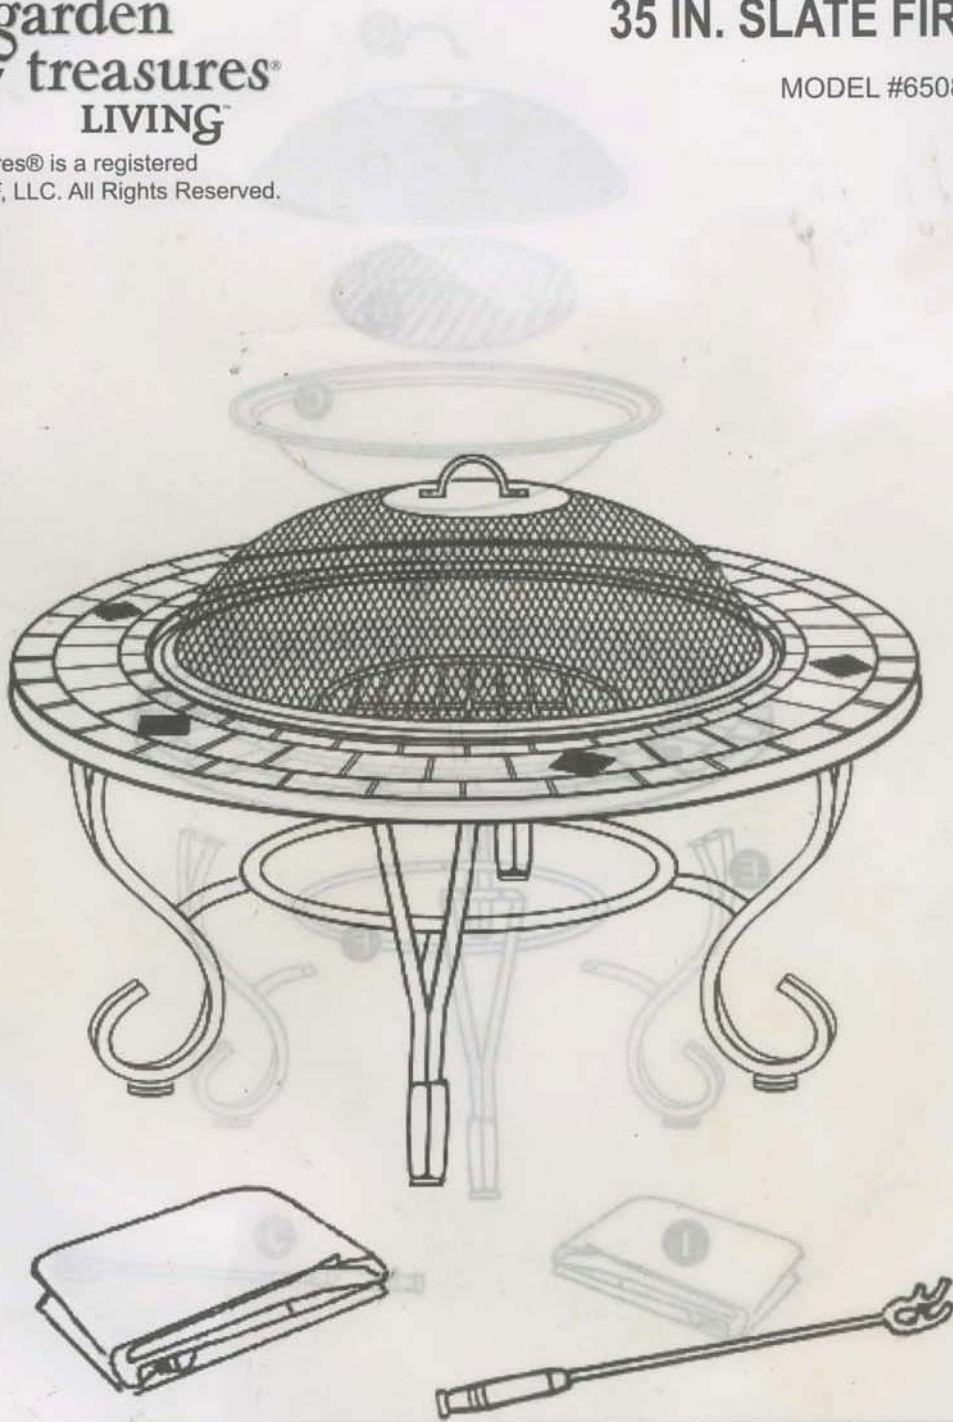


Part	Description	Quantity	Part	Description
A	Fire Screen	1 pc	F	Bottom Cap Panel
B	Grate	1 pc	G	Fire Pit Body
C	Fire Pit Body	1 pc	H	Fire Pit Base
D	Fire Pit Base	1 pc	I	Fire Pit Legs
E	Fire Pit Lid	1 pc	J	Fire Pit Handle
F	Fire Pit Lid	1 pc	K	Fire Pit Lid
G	Fire Pit Lid	1 pc	L	Fire Pit Lid



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 am - 6 pm, EST, Monday - Thursday; 8 am - 5 pm, EST, Friday.

 


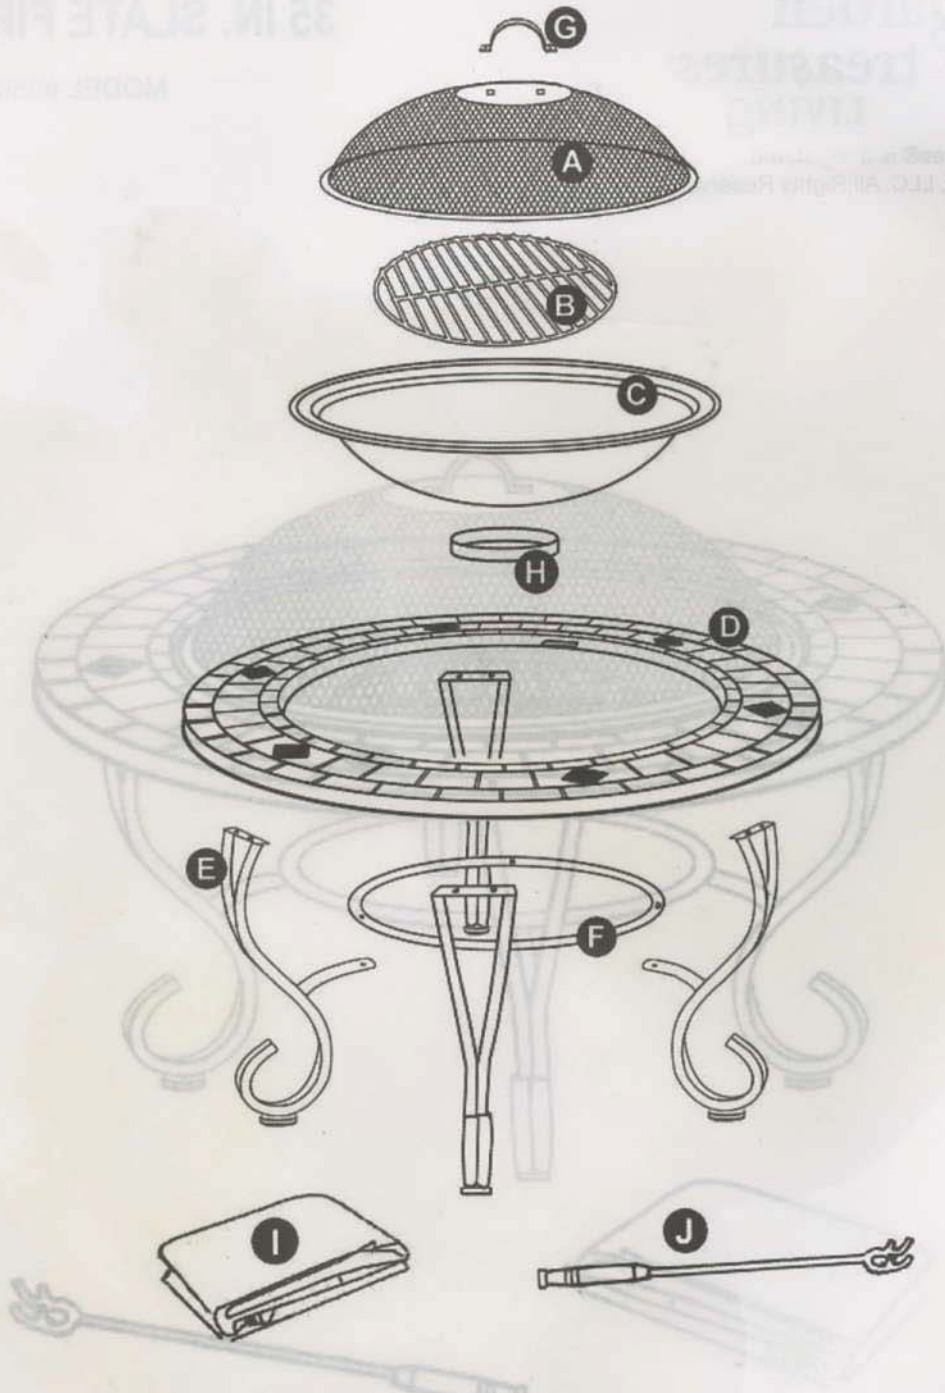


**PACKAGE CONTENTS**



Part	Description	Quantity
A	Fire Screen	1 pc
B	Grate	1 pc
C	Fire Bowl	1 pc
D	Slate Top Ring	1 pc
E	Leg	4 pcs

Part	Description	Quantity
F	Bottom Leg Ring	1 pc
G	Handle of Fire Screen	1 pc
H	Ash Catcher	1 pc
I	Cover	1 pc
J	Poker	1 pc

## HARDWARE CONTENTS

Part	Description	Quantity	Picture (Shown to size)
AA	1/4-in. x 1-3/8-in. Bolt	1	
BB	1/4-in. Nut	16	
CC	1/4-in. x 5/8-in. Bolt	8	
DD	Washer	22	
EE	1/4-in. x 1-in. Bolt	4	
FF	1/4-in. x 3/4-in. Bolt	2	

### ! WARNINGS AND CAUTIONS

#### WARNING:

- \* FOR OUTDOOR USE ONLY. NEVER LEAVE FIRE UNATTENDED.
- \* Supervise Children and Pets when the fire pit is in use.
- \* The fire pit is not designed for cooking or grilling food.
- \* DO NOT use this unit on a wood deck or on combustible surface such as dry grass, leaves, mulch, etc, and place it no closer than 2 feet from walls during use.

#### CAUTION:

 
- \* Burn only wood or charcoal in the fire pit. DO NOT use gasoline or kerosene to start the fire in your fire pit. Light the fire using a match or lighter.
- \* Do not touch the outside of your fire pit while it is in use.
- \* Use the poker to move the handle of the fire screen during use.
- \* Always have a fire extinguisher handy when burning.
- \* Do not extinguish your fire pit with water. The water may cause distortion, rust or flaking paint. Use fire extinguisher or allow the attended fire to die out in its own.
- \* Do not use in inclement weather.

### PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 15 minutes

Tools Required for Assembly: Wrench (included) and Adjustable Wrench (not included).



Wrench




Adjustable Wrench

## ASSEMBLY INSTRUCTIONS

1. Attach the Handle of Fire Screen (G) to Fire Screen (A) with 2 Bolts (FF), 2 Washers (DD) and 2 Nuts (BB). See Fig. 1.

Fig. 1

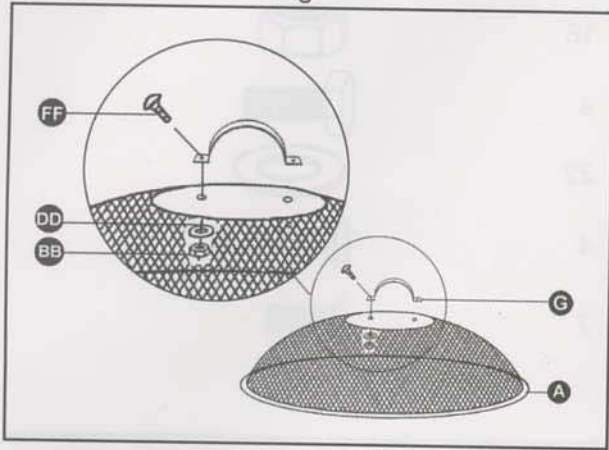


### Hardware Used

 

<b>FF</b>	1/4-in x 3/4-in Bolt		x 2
<b>DD</b>	Washer		x 2
<b>BB</b>	1/4-in Nut		x 2

2. Attach the Ash catcher (H) to Fire bowl (C) with 1 Bolt (AA) and 2 Nuts (BB). See Fig. 2.

Fig. 2

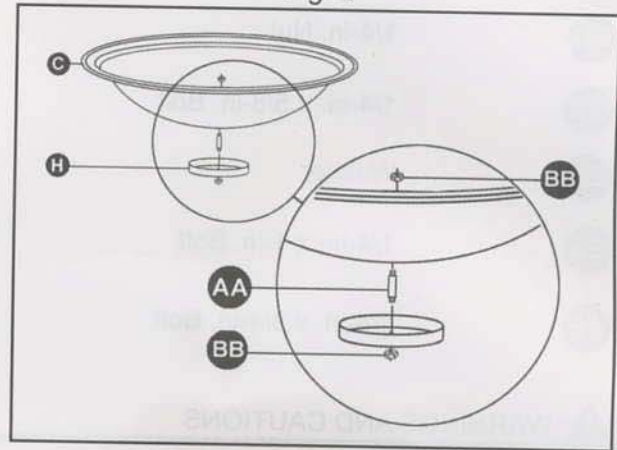


### Hardware Used

 


 
<b>AA</b>	1/4-in x 1-3/8-in Bolt		x 1
<b>BB</b>	1/4-in Nut		x 2

3. Attach the four Legs (E) onto Slate Top ring (D) with 8 Bolts (CC), 16 Washers (DD) & 8 Nuts (BB) and tighten slightly. Connect Bottom Leg Ring (F) and Leg (E) with 4 Bolts (EE), 4 Washers & 4 Nuts, and then tighten all the connections. See Fig. 3.

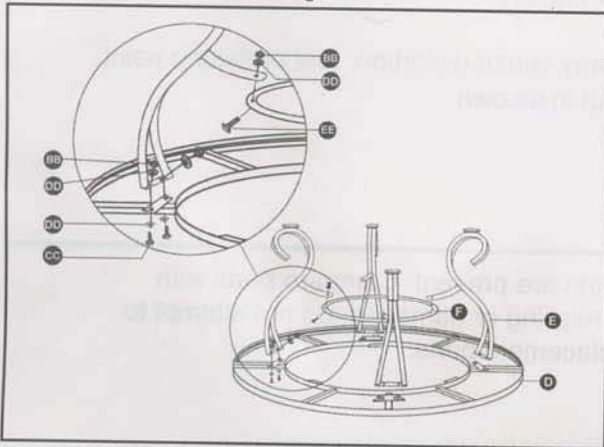Fig. 3




### Hardware Used

<b>CC</b>	1/4-in x 5/8-in Bolt		x 8
<b>DD</b>	Washer		x 20
<b>BB</b>	1/4-in Nut		x 12
<b>EE</b>	1/4-in x 1-in Bolt		x 4

4. Insert Fire bowl (C) on the assembled Base and Place the Grate (B) into Fire bowl. Then put Fire Screen (A) on Fire bowl. See Fig. 4.

Fig. 4

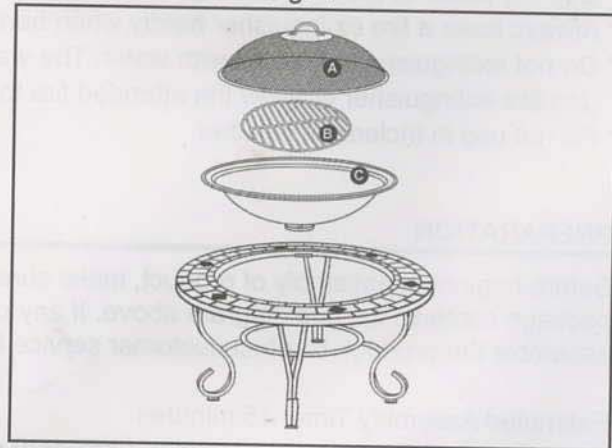

## CARE AND MAINTENANCE

- \* To extend the life of your fire pit, clean the bowl after each use and cover the unit to protect it from the elements.
- \* To maintain the coating color, cover the bottom of the fire bowl with small stones or sandstones before each use.
- \* To maintain the finish, clean the surface by using a soft cloth. Do not use a metal brush.
- \* If metal is scratched, the fire pit may need touch up painting. Ask your local paint store representative which paint is best for your type of fire pit. To prevent rusting, coat the exposed surface immediately.
- \* Although fire pits in general do well in adverse weather conditions, store it in an enclosed structure during the off-season.
- \* Don't wipe the real slate top with acidic material. Coat the surface of natural slate with floor wax or liquid wax to protect it from corrosion, oxidation and moisture.


## ONE YEAR LIMITED WARRANTY

This Limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your item provided the item is maintained with care and used for personal, residential purposes only. The manufacturer warrants this item to be free from defects in material and workmanship for a period of 1 YEAR. If any defect is found, please call our customer service department at 1-800-643-0067 for help. The manufacturer will not cover transportation or delivery costs or compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you certain legal rights, and you may have other rights that vary from state to state.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 am - 6 pm, EST, Monday - Thursday; 8 am - 5 pm, EST. Friday.

Part	Description	Part #
A	Fire Screen	1 pc
B	Grate	1 pc
C	Fire Bowl	1 pc
D	Slate Top Ring	1 pc
E	Leg	4 pcs
F	Bottom Leg Ring	1 pc
G	Handle of Fire Screen	1 pc
H	Ash Catcher	1 pc
I	Cover	1 pc
J	Poker	1 pc
AA	1/4-in. x 1-3/8-in. Bolt	1 pc
BB	1/4-in. Nut	16 pcs
CC	1/4-in. x 5/8-in. Bolt	8 pcs
DD	Washer	22 pcs
EE	1/4-in. x 1-in. Bolt	4 pcs
FF	1/4-in. x 3/4-in. Bolt	2 pcs
GG	Wrench	1 pc

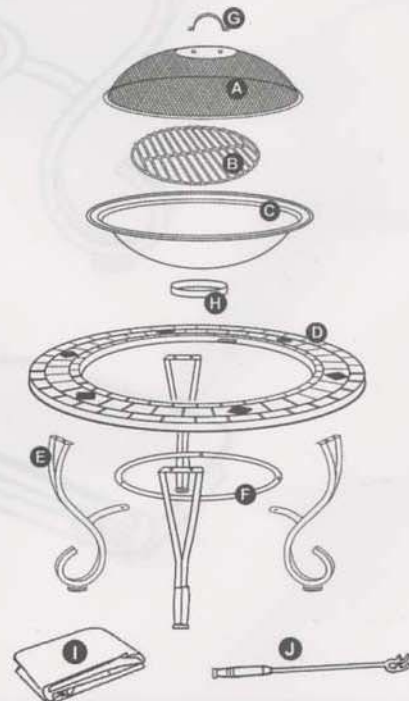

Printed in China