


Monopod Operating Instruction MX 450

Monopod Features

- (1) Wrist Strap
- (2) Camera Screw
- (3) Foam Hand Grip
- (4) Leg Locking Lever
- (5) Rubber Foot Pad
- (6) Ground Spike

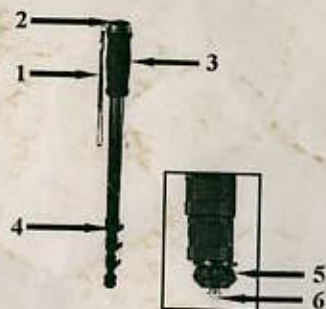

Extending the Monopod

To extend the leg sections, release the tab on the leg locking lever (4), and slide the leg to a desired length. Push the tab on the leg locking lever (4) back down, securing the leg section in place. Repeat this process for the remaining leg sections to achieve your desired height, assuring that all leg locking levers (4) have been properly locked.

Attaching Camera to Monopod

Place the camera screw (2) into the screw mount opening on the bottom of the camera. Turn the monopod in a clockwise direction until the camera is snug to the top of the monopod. Do not over tighten. Over tightening may damage the threads in the screw mount opening on the camera.

Outdoor Spike with Rubber Foot

When using the monopod indoors, be sure the rubber foot pad (5) is in the down position by turning the rubber foot pad (5) in a counter clockwise direction. If the ground spike (6) is desired for use outdoors, particularly while in soil or grass, turn the rubber foot pad in a clockwise direction, exposing the metal ground spike (6).

Caution: When using the monopod on concrete or rocky surfaces, we do not recommend using the product with the ground spike exposed, as it is more likely to slip.

V-Mount and Monopod Cap

Place the camera screw (2) into the screw mount opening on the bottom of the V-Mount / Monopod Cap. Turn the monopod in a clockwise direction until the V-Mount / Monopod Cap is snug to the top of the monopod.

Limited 1-Year Warranty

This product is warranted to the original purchaser to be free of defects in material and workmanship for the period of one year from the original date of purchase. This warranty is not subject to abuse, misuse, or transfer. OSN shall not be liable for damages from loss or delay of equipment use, incidental or damaged film. No implied or express warranty is made for any defects in this product, which results from accident, abuse, neglect, misuse, disassembly or repair modification.

The laws of some states do not allow the limitation of consequential or incidental damages, or how long an implied warranty last, so the above limitation or exclusion may not apply to you.

For warranty claims simply return to the place of purchase.

OSN Product Registration Form

Thank you for purchasing this OSN™ product. Please complete the following information to receive the following benefits:

Warranty Confirmation: Your product will be officially registered with OSN™, serving as confirmation of purchase date for warranty coverage.

Future Enhancements: Your registration helps us notify you of enhancements to your product and special offers that you are qualified for.

Please register online at www.osnusa.com or complete and return this card within 10 days.

1. First name: _____ Initial: _____ Last name: _____
 2. Address: _____ Apt. number: _____
 3. City: _____ State: _____ Zip code: _____
 4. Telephone: _____
 5. E-mail address: _____
 6. Date of purchase: _____
Month Day Year
 7. UPC number: (located on product carton) _____
 8. Model number: _____
- 8- _____
XXXXX - XXXXX - X

Send completed form to:

OSN
P.O. Box 871042
Stone Mountain, GA 30087