

Operating and Safety Instructions



Figure 1

1. Make sure bolts are tight enough so that support arms move with some resistance (Reference Figure 1).

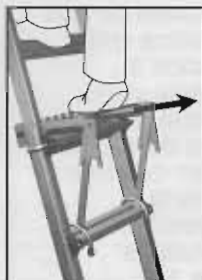


Figure 5

5. Push the platform back with toe. Make sure the forward tip of the platform rests securely against the inner rung of the ladder (Reference Figure 5).



Figure 2

2. Adjust the platform and support bar to fit ladder rung. Place the platform at desired height (Reference Figure 2).

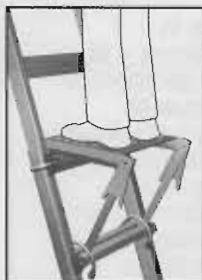


Figure 6

6. Check to make sure the platform is set properly in the "in use" position before standing on the platform (Reference Figure 6).



Figure 3

3. Push the platform forward to the "stored" position (Reference Figure 3).

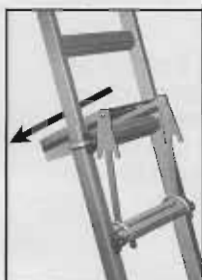


Figure 7

7. When finished working, step to rung above the platform and push the platform completely forward with toe to the "stored" position. Step down through the platform (Reference Figure 7).

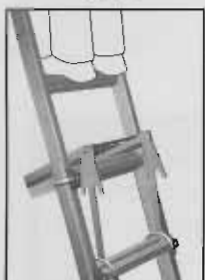


Figure 4

4. Climb ladder past the platform, stopping at the rung above the platform (Reference Figure 4).


WARNING

Before standing on the platform, make sure the platform is secure in the "in use" position.


Standing Platform is designed for use on Multi-Position ladders (model #'s AL-22, AL-13, AL-17-P, FL-17, FL-13, MP-13 and MP-17) only.

Platform Instructions

CAUTION: For use ONLY in the stepladder and stairway modes

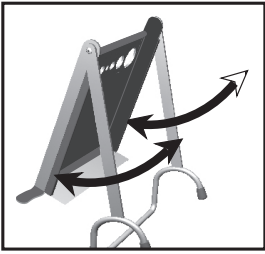


1. Make sure bolts are tight enough so that support arms move with some resistance.

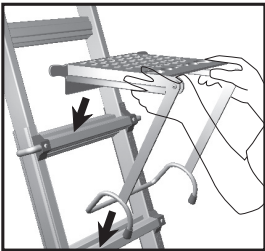


2. Adjust the platform and support bar to fit ladder rung. Place the platform at desired height. **(DO NOT USE PLATFORM/TRAY ON ANY OF THE TOP 3 RUNGS/STEPS OF THE LADDER)**




3. Push the platform forward to the "tucked" position for safe climbing.

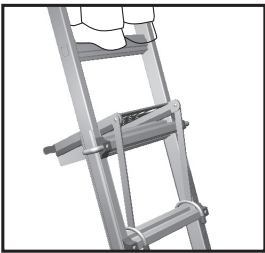


4. Climb ladder past the platform, stopping at the rung above the platform.

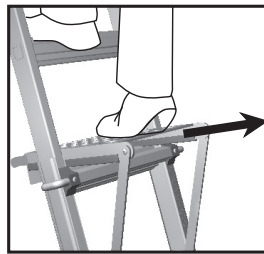

5. Push the platform back with toe. Make sure the forward tip of the platform rests securely against the inner rung of the ladder.

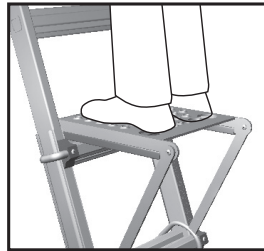

6. Check to make sure the platform is set properly in the "in use" position before standing on the platform. Platform must be level to the ground before using.

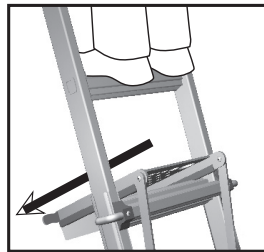


7. When finished working, step above the platform and push the platform completely forward with toe to the "tucked" position. Step down through the platform.

WARNING


1. Before standing on the platform or using the tray, make sure the platform/tray is secure in the "in use" position and level to the ground.
2. Do not use on any of the top 3 rungs/steps of the ladder.

Tray Instructions

CAUTION: For use ONLY in the stepladder and stairway modes

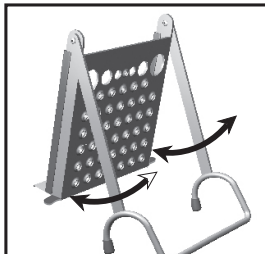

1. Make sure bolts are tight enough so the support arms move with some resistance.

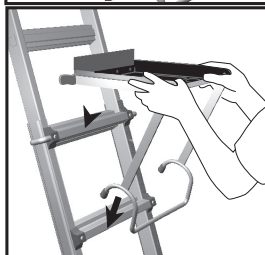

2. Adjust the tray and support bar to fit ladder rung. Place the tray at the desired height.



3. Check to make sure the tray is set properly in the "in-use" position before using it.

WARNING

DO NOT SIT OR STAND ON TRAY

Platform/Tray fits all Multi-Position Gorilla Ladders®